




## Ambulance Routine & Preventative Maintenance Checklist

### Check Monthly


- ❑ Check tires for wear/proper air pressure
- ❑ Check door switches and lubricate as necessary
- ❑ Check safety warning lights for proper operation
- ❑ Check back-up alarm device
- ❑ Check and clean back-up camera
- ❑ Check and clean interior camera
- ❑ Check and clean all screens (LCD for cameras, Vista screens, etc.)
- ❑ Clean the inverter/charger unit, make sure DC cables are secure and fasteners are tight
- ❑ Check primary stretcher systems
- ❑ Check suspension system for loose or worn components and leaks around fittings
- ❑ Check the standard heating/AC system; clean if necessary

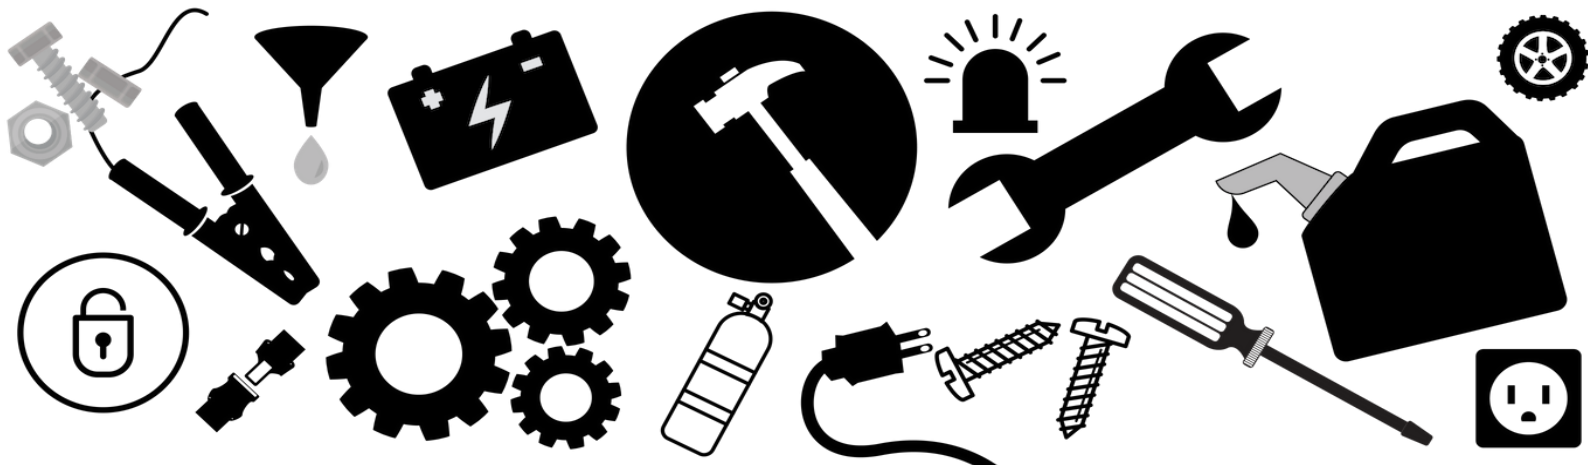



## Check Quarterly

- ❑ Check suction device
- ❑ Check siren speakers
- ❑ Clean and check battery connections; perform load test
- ❑ Lubricate conversion batteries' sliding tray
- ❑ Check oxygen systems to ensure there is no leak
- ❑ Check seat belts and latches for wear/malfunction
- ❑ Check safety net webbing and anchors for wear/malfunction
- ❑ Check stretcher and backboard fastening systems
- ❑ Check and lubricate rear flip-up step swivels
- ❑ Lubricate door handles, check for wear/corrosion
- ❑ Check and lubricate door locks and lock barrels
- ❑ Check, clean, and lubricate door hinges
- ❑ Check, clean, and lubricate weatherstrips

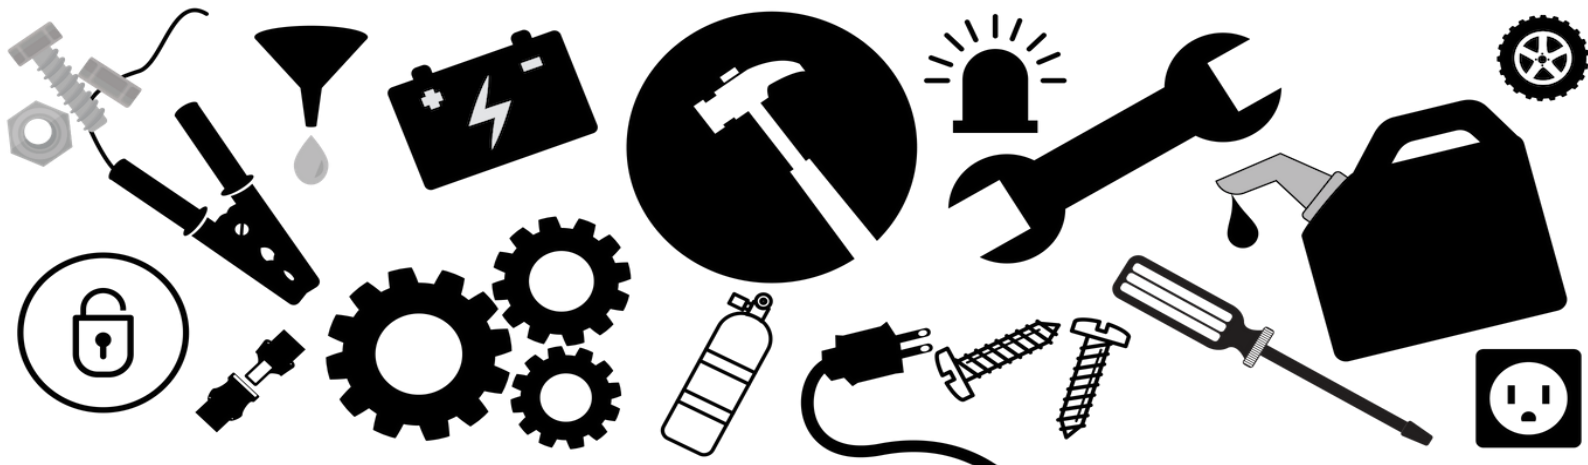

### Check Bi-annually

- ❑ Check air pressure in spare tire
- ❑ Check electrical panel connections
- ❑ Check and clean all connections in the battery isolator
- ❑ Check opening grille of each chrome vent; repair if necessary
- ❑ Check tie-down knobs of primary antler hook and rail assembly
- ❑ Check emergency release latches for doors
- ❑ Check cooling system lines, fluid levels, and coolant strength
- ❑ Check and clean body & door drain holes

### Check Annually

- ❑ Check, wax all interior surfaces such as aluminum, ABS, and fiberglass
- ❑ Check quick-release oxygen cylinder bracket; tighten if necessary
- ❑ Check and reset all 110 volts AC outlets; repair as necessary

