




Ambulance Routine & Preventative Maintenance Checklist

Check Monthly


- ☐ **Inspect tires for wear/proper inflation pressure**
- ☐ **Test/verify operation of all safety warning lights**
- ☐ **Confirm backup alarm functionality**
- ☐ **Clean cameras and display screens**
- ☐ **Inspect inverter/charger connections**
- ☐ **Verify primary stretcher system operation**
- ☐ **Check suspension components for wear and hydraulic leaks**
- ☐ **Test HVAC system operation and clean filters**

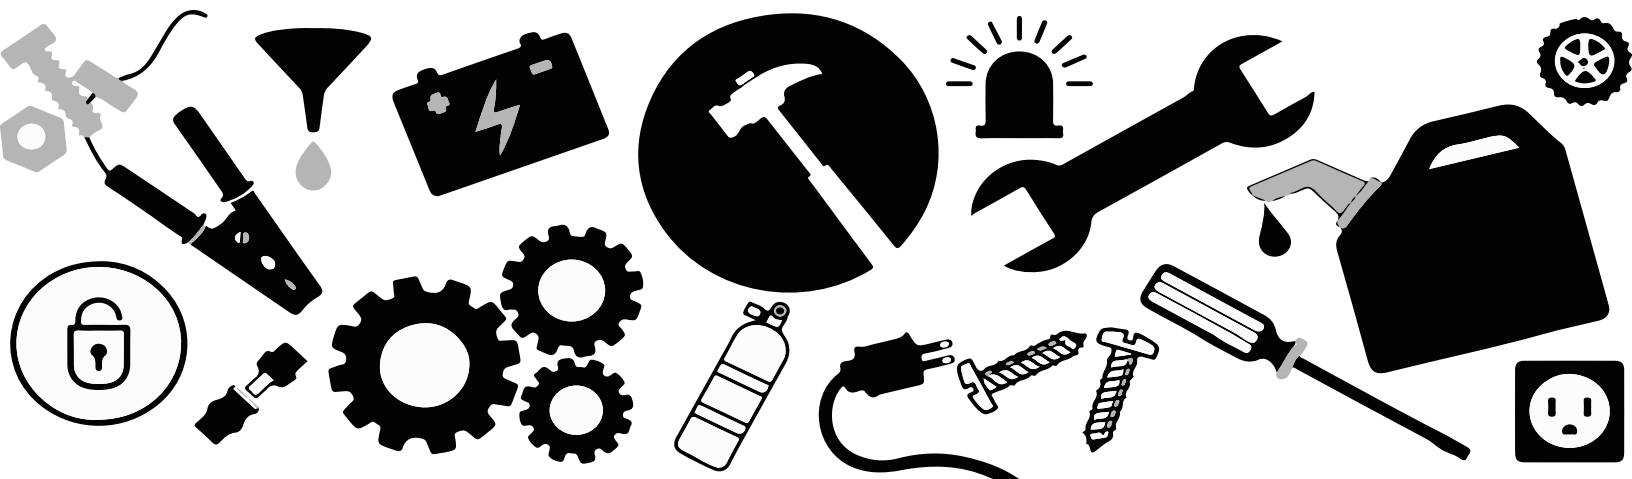



Check Quarterly

- ☐ Test suction devices and siren speakers
- ☐ Load-test batteries and clean connections
- ☐ Lubricate conversion batteries' sliding tray
- ☐ Inspect oxygen systems for leaks
- ☐ Check restraint systems (seat belts/safety nets)
- ☐ Check safety net webbing and anchors for wear/malfunction
- ☐ Verify stretcher/backboard fastening systems
- ☐ Check and lubricate rear flip-up step swivels
- ☐ Lubricate door handles, check for wear/corrosion
- ☐ Lubricate high-use components:
 - ☐ Conversion battery sliding tray
 - ☐ Rear flip-up step swivels
 - ☐ Door handles, locks, hinges, and weatherstrips

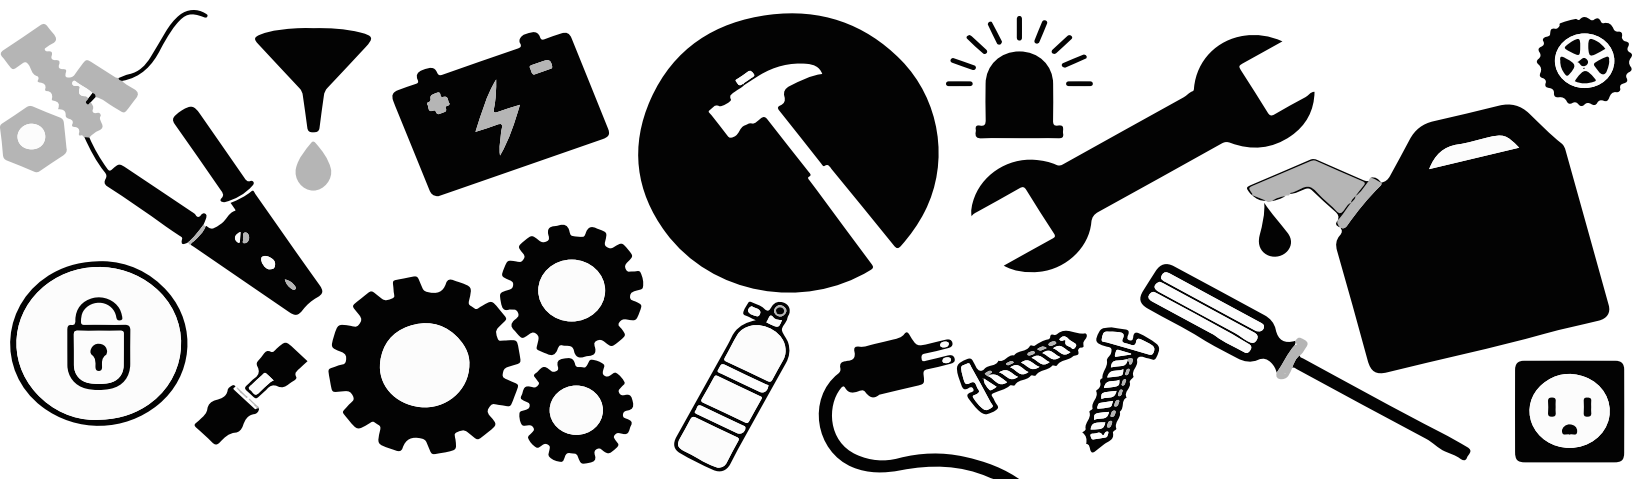



Check Bi-Annually

- ☐ Check spare tire pressure
- ☐ Inspect electrical panel connections
- ☐ Clean battery isolator connections
- ☐ Check the opening grille of each chrome vent, repair if necessary
- ☐ Check tie-down knobs of primary antler hook and rail assembly
- ☐ Verify emergency door release functionality
- ☐ Inspect cooling system (lines, fluid levels, coolant protection)
- ☐ Clear body and door drain holes

Check Annually

- ☐ Apply protective wax to interior surfaces (aluminum, ABS, fiberglass)
- ☐ Inspect quick-release oxygen cylinder brackets, tighten if necessary
- ☐ Test and reset all 110V AC outlets, repair as necessary

